



Warning! Please ensure that you follow the QIG (Quick Installation Guide). Not adhering to the instructions may affect the validity of the product warranty.

Polite Turkish Version: Lütfen QIG'yi (Hızlı Kurulum Kılavuzu) dikkatle takip ediniz. Talimatlara uyulmaması ürün garantisini geçersiz kılabilir.

This QIG is applicable to the following models:

BFW-PUZ-240-BB27A-RP
BFW-PUZ-360-BB27A-RP
BFW-PUZ-240-WW27A-RP
BFW-PUZ-360-WW27A-RP

A <p>CPU Cooler CPU Soğutucu</p>	B <p>Intel Backplate Intel Arka Plaka</p>	C <p>Intel Bracket Intel Braketi</p>	D <p>AMD Bracket AMD Braketi</p>	E <p>Thermal Paste Termal Macun</p>	G1 <p>Screw Vida</p>	G2 <p>AMD Bracket Screw x4 AMD Braketi Vidaları x4</p>	
G3 <p>Intel Screw Stud x4 Intel Vida Saplaması x4</p>	G4 <p>2011 Screw Stud x4 2011 Vida Saplaması x4</p>	G5 <p>Case Screws 240/280: x8 360: x12 Kasa Vidaları 240/280: x8 360: x12</p>					

Step1 <p>Remove the protection film / Applying thermal paste Koruyucu filmi çıkarın / Termal macunu uygulayın</p>	Step2 <p>Secure the cooler -Intel LGA 115X/1200/1700 Soğutucuyu sabitleyin - Intel LGA 115X/1200/1700</p>	Step2.1 <p>Secure the cooler -Intel LGA 2011 Soğutucuyu sabitleyin - Intel LGA 2011</p>	Step3 <p>Remove the motherboard socket. Retain the backplane. Anakart soketini çıkarın. Arka plakayı saklayın.</p>	Step4 <p>Secure the cooler -AMD Soğutucuyu sabitleyin - AMD</p> <p>Fastener orientation. bağlantı elemanının yönü</p>
---	---	---	--	---

Step5 <p>Extran kablosu bağlantısı Display harness link</p> <p>+5V D+ 5V A-RGB</p> <p>ARGB connectors for water blocks ARGB connectors for fans</p> <p>ARGB connectors for water pipes</p>	<p>Please link the display to the motherboard USB2.0 interface (Generally in the lowermost position of the motherboard, according to the direction of the interface gap can be inserted, guests can check according to the motherboard manual)</p> <p>Lütfen ekran anakart üzerindeki USB 2.0 arayüzüne bağlayın (genellikle anakartın en alt kısmında bulunur; arayüz boşluğunun yönüne göre takılabilir; kullanıcılar anakart kılavuzuna bakarak kontrol edebilir).</p> <p>Connect the 3-pin connector from the pump unit to AIO/PUMP socket on the motherboard Pompa ünitesinden gelen 3-pin konektörü, anakart üzerindeki AIO/PUMP soketine bağlayın.</p> <p>Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard 4-pin fan PWM konektörünü, anakart üzerindeki CPU_FAN soketine bağlayın.</p> <p>Connect the fan to the 5V ARGB socket on the motherboard Fan, anakart üzerindeki 5V ARGB soketine bağlayın.</p>	Step6 <p>Secure the fans and radiator Fanları ve radyatörü sabitleyin.</p>	
--	---	--	--